



Compensator

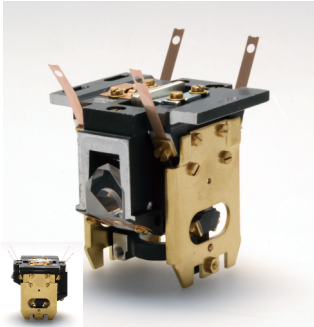

The center technology of auto level is the compensator. High-quality electronic wire from Switzerland ensure the stability of compensator, it will not be bent or deformed in your long-term working. The sheet metal at the bottom is the cornerstone of the whole compensator. It keeps the high accuracy for leveling.

Metal Protection

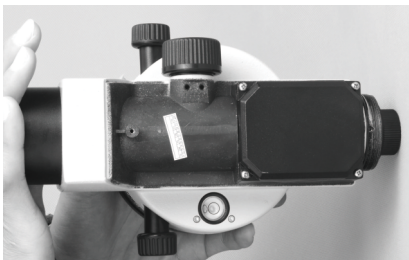

Excellent manufacturing design improve the quality to achieve the goal. The metal cover can isolate the effects from external magnetic field for a better performance.

Aluminum Axis



The quality of raw material is the guarantee for product. After the hardening treatment, the aluminum axis keep a high consistency to ensure the wear resistance.



Specifications

Item	
Magnification	32X
Effective Objective Aperture	45mm
Standard Deviation in 1km	1.0mm
Standard Deviation with Micrometer FP1	0.5mm
Image	Erect
Reticle	Cross Reticle
Field of View	1°30'
Min. Focus Distance	0.6m
Multiplication Constant	100
Addictive Constant	0
Compensator Type	Magnetic Damping
Compensator Range	±15'
Compensator Accuracy	±0.3"
Sensitivity of Circular Bubble	8'/2mm
Circular Graduation	360° or 400 GON
Working Environment	-30°C~+50°C
Protection	IP65
Size	251*144*138mm
Weight	2.2kg